


# Xede Wiring Diagram – Toyota Hilux 4.0L V6 Aftermarket Supercharger Kit (non factory fitted TRD supercharger or Rotrex)

## Wiring Details:

Note: Connectors are drawn as seen from the wire side.

<b><i>XEDE</i></b> Configuration:	S
<b><i>XEDE</i></b> Revisions:	All
<b><i>XEDE</i></b> Harness:	XH-WBG (Generic Harness)
Special Notes / Information:	See Diagram Over Page

ECU Connector  
View from back of connectors  
(wire view)

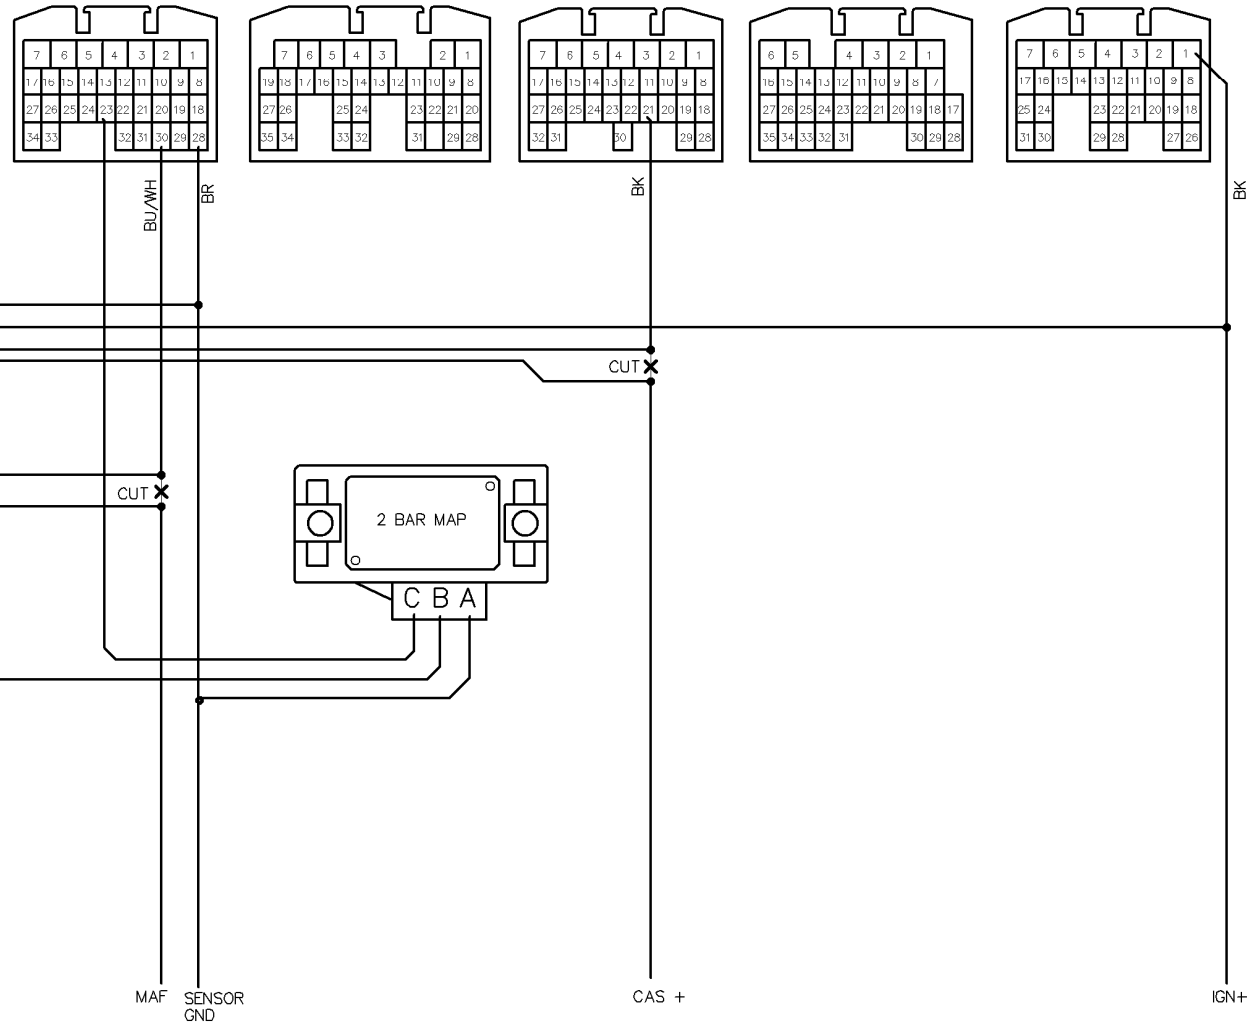

\* ONE OR BOTH OF THE CHASSIS GROUNDS MUST BE CONNECTED IF ANY OF THE FOLLOWING XEDE FEATURES ARE BEING USED:

- WATER SPRAY
- BOOST CONTROL
- AUXILIARY INJECTOR DRIVE

\*\* Red wire in 3 core shielded cable. DO NOT terminate the shield wire in the 3 core cable

